

## About Paper

Using unsuitable paper may lead to paper jams, poor print quality, breakdown and damage to your printer. In order to use the features of this printer effectively, use the suggested paper that is recommended here.

### Usable Paper

The types of paper that can be used on this printer are as follows:

Paper Tray	Size	Paper Type (Weight)	Loading Capacity
Tray 1 (MPT)	Letter (8.5 x 11 in.),	Plain (65–120 g/m <sup>2</sup> )	150 sheets (Standard paper) or 15 mm or below
	Legal (8.5 x 14 in.),	(17–32 lb. Bond)	
	Executive (7.25 x 10.5 in.),	Thin Card Stock (100–163 g/m <sup>2</sup> )	
	Folio (8.5 x 13 in.),	(37–60 lb. Cover)	
	#10 Commercial (4.1 x 9.5 in.)	Thick Card Stock (160–220 g/m <sup>2</sup> )	
	Monarch (3.8 x 7.5 in.)	(60–80 lb. Cover)	
	A4 (210 x 297 mm)	Glossy Paper (100–160 g/m <sup>2</sup> ) (37–	
	A5 (148 x 210 mm)	60 lb. Cover)	
	B5 (182 x 257 mm)	Thick Glossy Paper (160 220 g/m <sup>2</sup> ,	
	DL (110 x 220 mm)	60–80 lb. Cover)	
	C5 (162 x 229 mm)	Labels	
Custom:	Transparency		
76.2–127 mm (3–5 in.)	Paper Envelope		
216–355.6 mm (8.5–14 in.)			
Tray 2	Letter (8.5 x 11 in.),	Plain (65–120 g/m <sup>2</sup> )	Tray 2 holds
Tray 3	Legal (8.5 x 14 in.),	(17–32 lb. Bond)	250 sheets.
	Executive (7.25 x 10.5 in.)	Thin Card Stock (100–163 g/m <sup>2</sup> )	Tray 3 holds
	Folio (8.5 x 13 in.),	(37–60 lb. Cover)	550 sheets.
	A4 (210 x 297 mm)	Thick Card Stock (160–220 g/m <sup>2</sup> )	(Standard paper)
	A5 (148 x 210 mm)	(60–80 lb. Cover)	or 27.6 mm or
	B5 (182 x 257 mm)	Glossy Paper (100–160 g/m <sup>2</sup> )	below
	Custom:	(37–60 lb. Cover)	
	148– 215.9 mm (5.83–8.5 in.)	Thick Glossy Paper (160 200 g/m <sup>2</sup> ,	
	210–355.6 mm (8.27–14 in.)	60–80 lb. Cover)	
		Labels	

For details on how to load envelopes, see [Printing Envelopes](#) on page 69.

Printing on paper that has different settings from the paper size or paper type selected on the print driver, or loading paper into an unsuitable paper tray for printing, may lead to paper jams. To ensure that printing is correctly done, select the correct paper size, paper type, and paper tray.

The printed image may fade due to moisture, such as water, rain or vapor. For details, contact your reseller.